



·x in the table indicates for which system the clamping angle piece is suitable;
·a in the table stands for the number of steps.

HE06.1206.1903

HE11.0006.1500

HI16.7006.1400

HI20.7006.4002