



Instruction Manual BP10.1000.0008 RF receiver and remote control

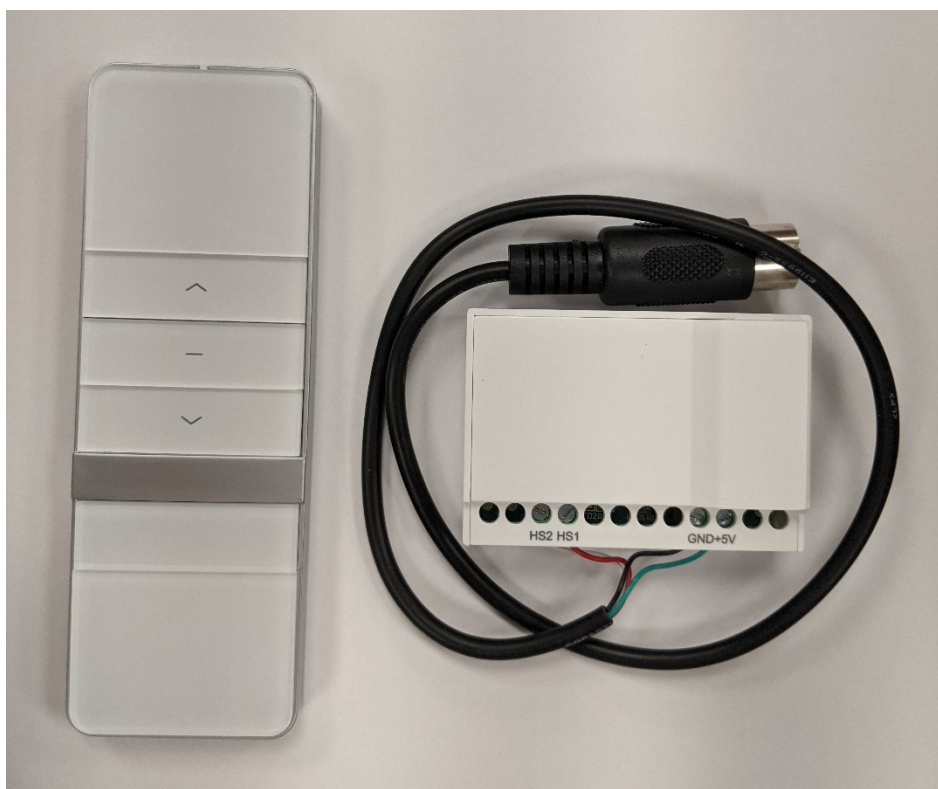


Receiver

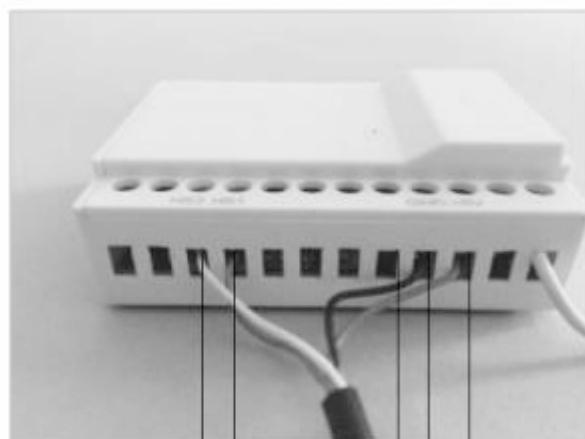

Motor up
Motor down
Input 5V
GND
Setting button (5th from the right)

Single channel handset

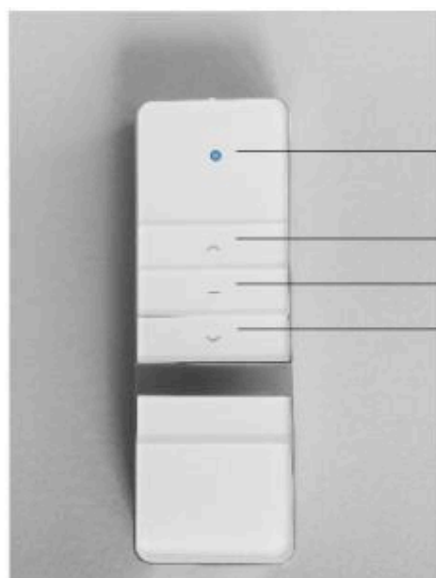

Front

Indicator LED
Up button
Stop button
Down button



Back

Setting button
(P2)

Installation

During setup, press between the different steps in less than 4.5 seconds, otherwise the system will return to its original state.

Controlled movement

- Step 1: connect the receiver to the S1 controller
- Step 2: Press 1x on the setting button of the receiver (LED flashes)
- Step 3: Press 1x on the P2 setting button of the handset (LED flashes)
- Step 4: Press 1x on the P2 setting button of the handset (LED flashes)
- Step 5: Press 1x on the 'up button' on the handset (LED flashes)

The handset is now connected to the receiver and can be operated by continuously pressing the 'up' or 'down' button. By releasing the button in question, the movement will stop.

-Extra function- automated/controlled movement

During setup, press between the different steps in less than 4.5 seconds, otherwise the system will return to its original state. Note: if the setting is repeated, the function will be cancelled.

Automatic movement

- Step 1: Press 1x on the P2 setting button of the handset (LED flashes)
- Step 2: Press 1x on the 'up button' of the handset (LED flashes)
- Step 3: Press 1x on the P2 setting button of the handset (DC flashes)

The controlled movement has now been changed to an automated movement. This movement can be controlled by pressing the 'up' or 'down' button once and the movement will start automatically. By pressing the 'stop' button the movement will stop.

-Extra function- Add handset

During setup, press between the different steps in less than 4.5 seconds, otherwise the system will return to its original state. Note: handset 'A' is the already paired handset, and handset 'B' is not.

Add a handset

- Step 1: Press 1x on the P2 setting button of the handset 'A' (LED flashes)
- Step 2: Press 1x on the P2 setting button of the handset 'A' (LED flashes)
- Step 3: Press 1x on the P2 setting button of the handset 'B' (LED flashes)

The additional handset 'B' has now been added and can be controlled in the same way as the original handset 'A'.

-Extra function- Remove handsets

During setup, press between the different steps in less than 4.5 seconds, otherwise the system will return to its original state. Note: removes all handset channels, the factory settings are hereby restored.

Remove handsets

- Step 1: Press 1x on the P2 setting button on the handset (LED flashes)
- Step 2: Press 1x on the stop button on the handset (LED flashes)
- Step 3: Press 1x on the P2 setting button on the handset (LED flashes)

All handsets have been moved and restored to the factory settings